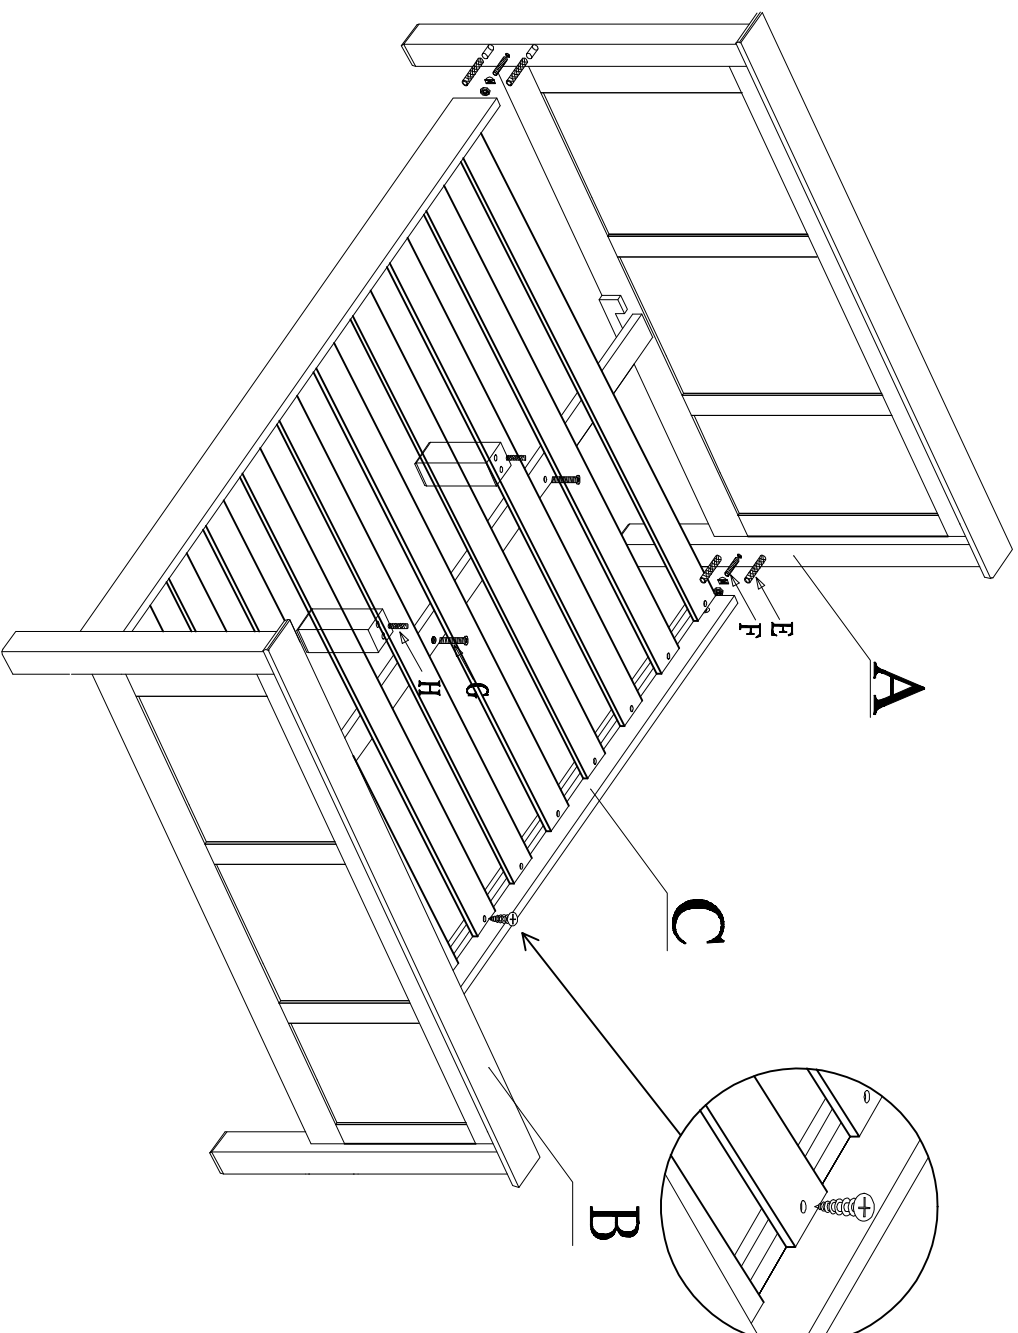









TO SFT THE BED



FITTINGS

Assembly		Hexa Bolt	
	× 4		× 2
Hexa Wrench		Spanner	
	× 1		× 1
Ø12 Wood Dowel		Ø10 Wood Dowel	
	× 8		× 2
Ø12×60		Ø10×40	
Screw			
	× 40		
M4×25			